Always here to help you / 始终如一地为您提供帮助

Register your product and get support at / 请登录以下网址并得到相应的帮助
www.philips.com/welcome

S7370
S7310

Question?
有疑问?
Contact Philips
请联系飞利浦

PHILIPS

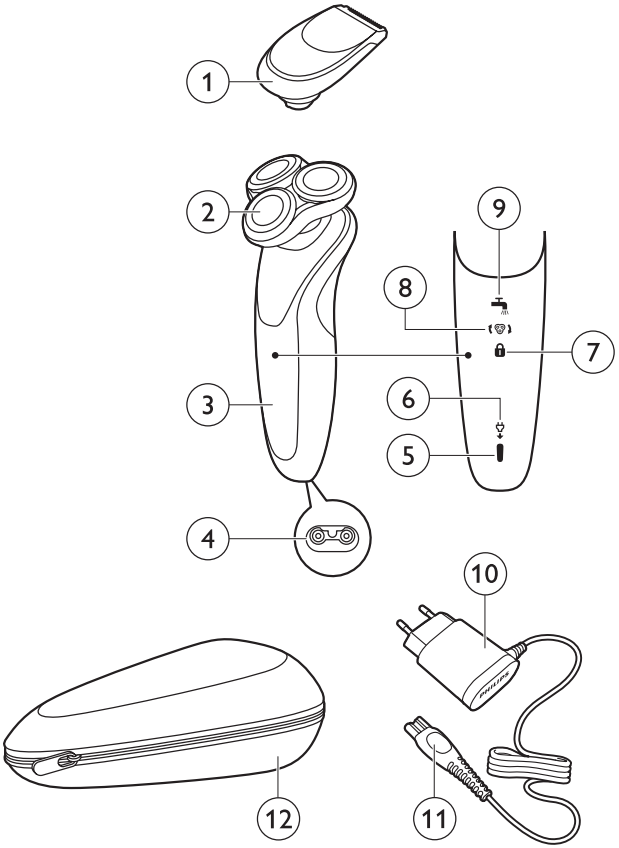
1
2
3
4
5
6
7
8
9
10
11
12

ENGLISH 6
简体中文 23

S7370, S7310

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**.
Please read this user manual, as it contains information about the features of this shaver as well as some tips to make shaving easier and more enjoyable.

General description (Fig. 1)

1 Click-on trimmer attachment
2 Click-on shaving unit
3 Handle
4 Socket for small plug
5 Battery charge indicator
6 'Unplug for use' symbol
7 Travel lock symbol
8 Replacement reminder
9 Cleaning reminder
10 Adapter
11 Small plug
12 Pouch

Important

Read this important information carefully before you use the appliance and save this leaflet for future reference.

Danger

- Keep the adapter dry.

Warning

- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always unplug the shaver before you clean it under the tap.

Caution

- Never use water hotter than 80°C to rinse the shaver.
- Do not use the appliance, adapter or any other part if it is damaged, as this may cause injury. Always replace a damaged adapter, charging stand or part with one of the original type.
- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Water may leak from the socket at the bottom of the shaver when you rinse it. This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.

Compliance with standards

- This shaver is waterproof and complies with the internationally approved safety regulations. It is suitable for use in the bath or shower and for cleaning under the tap. For safety reasons, the shaver can therefore only be used cordlessly.
- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

General

- The adapter is equipped with an automatic voltage selector and is suitable for mains voltages ranging from 100 to 240 volts.
- The adapter transforms 100-240 volts to a safe low voltage of less than 24 volts.

The display

Charging

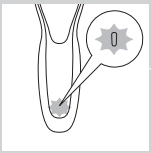

Note: This appliance can only be used cordlessly.

- Charging takes approx. 1 hour.
- Quick charge: When the shaver does **not** contain enough energy for one shave, the battery charge indicator flashes fast. When the battery charge indicator starts to flash slowly, the shaver contains enough energy for one shave.
- If you leave the appliance connected to the mains, the charging process continues. To indicate that the appliance is charging, the battery charge indicator flashes white slowly.

Battery fully charged

Note: This appliance can only be used cordlessly.

Note: When the battery is full, the display switches off automatically after 30 minutes. When you press the on/off button during charging, the 'unplug for use' symbol flashes white to remind you that you have to disconnect the appliance from the mains.

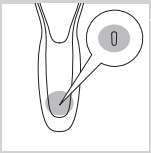

- When the battery is fully charged, the battery charge indicator lights up white continuously.

Battery low

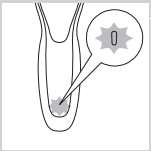

- When the battery is almost empty, the battery charge indicator flashes orange.

Cleaning reminder

For optimal shaving performance, we advise you to clean the shaver after every use.

- When you switch off the shaver, the cleaning reminder flashes to remind you to clean the shaver.

Travel lock

You can lock the shaver when you are going to travel. The travel lock prevents the shaver from being switched on by accident.

Activating the travel lock

1 Press the on/off button for 3 seconds to enter the travel lock mode.

◗ While you activate the travel lock, the travel lock symbol lights up white continuously. When the travel lock is activated, the travel lock symbol flashes.

Deactivating the travel lock

1 Press the on/off button for 3 seconds.
◗ The travel lock symbol flashes and then lights up continuously.
The shaver is now ready for use again.

Replacing shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years.
- The appliance is equipped with a replacement reminder which reminds you to replace the shaving heads. The replacement reminder lights up white continuously.

Note: After replacing the shaving heads, you need to reset the shaver by pressing the on/off button for 7 seconds.

'Unplug for use' reminder

- The appliance is equipped with an 'unplug for use' reminder. The 'unplug for use' symbol flashes white to remind you that you have to disconnect the appliance from the mains.

Charging

Charging takes approx. 1 hour.
A fully charged shaver has a shaving time of up to 50 minutes.

Note: This appliance can only be used cordlessly.
Charge the shaver before you use it for the first time and when the display indicates that the battery is almost empty .

Charging with the adapter

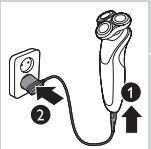

1 Make sure that the appliance is switched off.

2 Insert the small plug into the appliance (1) and put the adapter in the wall socket (2).

Using the shaver

Shaving

Skin adaptation period
Your first shaves may not bring you the result you expect and your skin may even become slightly irritated. This is normal. Your skin and beard need time to adapt to any new shaving system.
We advise you to shave regularly (at least 3 times a week) with this shaver for a period of 3 weeks to allow your skin to adapt to the new shaver.

Note: This appliance can only be used cordlessly.

1 Press the on/off button once to switch on the shaver.

◗ The display lights up for a few seconds.

2 Move the shaving heads over your skin in circular movements.

Note: Do not make straight movements.

3 Press the on/off button once to switch off the shaver.

◗ The display lights up for a few seconds to show the remaining battery charge.

Wet shaving

You can also use this shaver on a wet face with shaving foam or shaving gel.
To shave with shaving foam or shaving gel, follow the steps below:

1 Apply some water to your skin.

2 Apply shaving foam or shaving gel to your skin.

3 Rinse the shaving unit under the tap to ensure that the shaving unit glides smoothly over your skin.

4 Press the on/off button once to switch on the shaver.

5 Move the shaving heads over your skin in circular movements.

Note: Rinse the shaver under the tap regularly to ensure that it continues to glide smoothly over your skin.

6 Dry your face and thoroughly clean the shaver after use (see chapter 'Cleaning and maintenance').

Note: Make sure you rinse all foam or shaving gel off the shaver.

Using the trimmer attachment

You can use the trimmer attachment to groom your sideburns and moustache.

1 Make sure the appliance is switched off.

2 Pull the shaving unit straight off the appliance.

Note: Do not twist the shaving unit while you pull it off the appliance.

3 Insert the lug of the trimmer attachment into the slot in the top of the shaver. Then press down the trimmer attachment to attach it to the appliance ('click').

4 Press the on/off button once to switch on the appliance.

- The display lights up for a few seconds.

5 You can now start trimming.

6 Press the on/off button once to switch off the appliance.

- The display lights up for a few seconds to show the remaining battery charge.

7 Pull the trimmer attachment straight off the appliance.

Note: Do not twist the trimmer attachment while you pull it off the appliance.

8 Insert the lug of the shaving unit into the slot in the top of the appliance. Then press down the shaving unit to attach it to the appliance ('click').

Cleaning and maintenance

Cleaning the shaver under the tap

Clean the shaver after every shave for optimal shaving performance.

Be careful with hot water. Always check if the water is not too hot, to prevent your hands from getting burnt.

Never dry the shaving unit with a towel or tissue, as this may damage the shaving heads.

1 Switch off the shaver.

2 Rinse the shaving unit under a warm tap for some time.

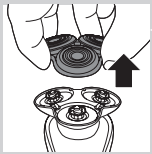

3 Pull the shaving head holder off the bottom part of the shaving unit.

4 Rinse the shaving head holder under a warm tap for 30 seconds.

5 Carefully shake off excess water and let the shaving head holder dry.

6 Reattach the shaving head holder to the bottom part of the shaving unit ('click').

Thorough cleaning method

Make sure the appliance is switched off.

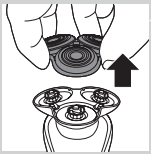

1 Pull the shaving head holder off the bottom part of the shaving unit.

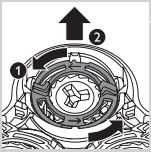

2 Turn the retaining rings anticlockwise (1) and remove them (2).

3 Remove the shaving heads from the shaving head holder. Each shaving head consists of a cutter and guard.

Note: Do not clean more than one cutter and guard at a time, since they are all matching sets. If you accidentally put a cutter in the wrong shaving guard, it may take several weeks before optimal shaving performance is restored.

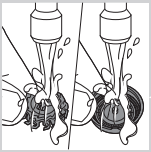

4 Clean the cutter and guard under the tap.

5 After cleaning, place the cutter back into the guard.

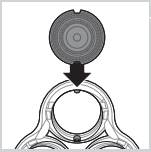

6 Put the shaving heads back into the shaving head holder.

Note: Make sure the notches on both sides of the shaving heads fit exactly onto the projections in the shaving-head holder.

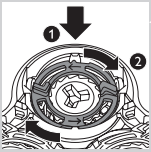

7 Place the retaining rings back onto the shaving head holder (1) and turn them clockwise (2).

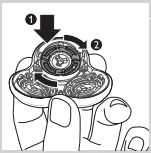

Note: Hold the shaving head holder in your hand when you reinsert the shaving heads and reattach the retaining rings. Do not place the shaving head holder on a surface when you do this, as this may cause damage.

8 Reattach the shaving head holder to the bottom part of the shaving unit.

Cleaning the trimmer attachment

Clean the trimmer attachment every time you have used it.

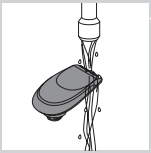

1 Switch on the appliance with the trimmer attachment attached.

2 Rinse the trimmer attachment under a hot tap for some time.

3 After cleaning, switch off the appliance.

Tip: For optimal trimmer performance, lubricate the trimmer teeth with a drop of sewing machine oil every six months.

4 Carefully shake off excess water and let the trimmer attachment dry.

Storage

1 Store the shaver in the pouch supplied.

Note: We advise you to let the shaver dry before you store it in the pouch.

Replacement

Replacing the shaving heads

For maximum shaving performance, we advise you to replace the shaving heads every two years.

Replacement reminder
The shaving unit symbol will light up to indicate that the shaving heads need to be replaced. Replace damaged shaving heads right away. Only replace the shaving heads with original SH70 Philips shaving heads.

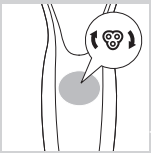

1 The shaving unit symbol lights up continuously when you switch off the shaver.

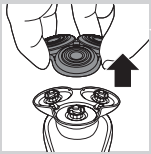

2 Pull the shaving head holder off the bottom part of the shaving unit.

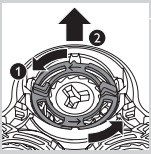

3 Turn the retaining rings anticlockwise (1) and remove them (2).

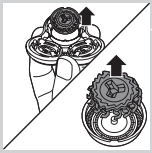

4 Remove the shaving heads from the shaving head holder and throw them away.

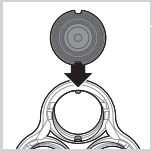

5 Place new shaving heads in the holder.

Note: Make sure the notches on both sides of the shaving heads fit exactly onto the projections in the shaving-head holder.

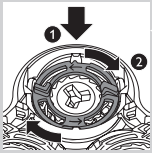

6 Place the retaining rings back onto the shaving heads (1) and turn them clockwise (2).

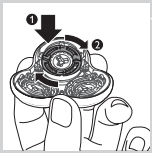

Note: Hold the shaving head holder in your hand when you reinsert the shaving heads and reattach the retaining rings. Do not place the shaving head holder on a surface when you do this, as this may cause damage.

7 Reattach the shaving head holder to the bottom part of the shaving unit.

8 To reset the shaver, press and hold the on/off button for approx. 7 seconds.

Ordering accessories

To buy accessories or spare parts, visit **www.shop.philips.com/service**. or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details). The following parts are available:

- HQ8505 adapter
- SH70 Philips shaving heads
- HQ110 Philips Shaving Head Cleaning Spray

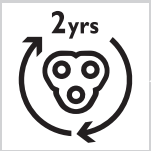

Shaving heads

- We advise you to replace your shaving heads every two years. Always replace the shaving heads with original SH70 Philips shaving heads.

Recycling

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help preserve the environment.

Removing the rechargeable shaver battery

Only remove the rechargeable battery when you discard the shaver. Make sure the battery is completely empty when you remove it.

Be careful, the battery strips are sharp.

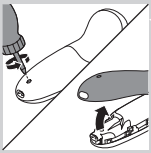

1 Remove the screw in the backpanel with a screwdriver. Then remove the back panel.

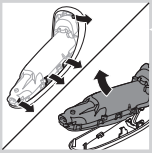

2 Bend the hooks aside and remove the power unit.

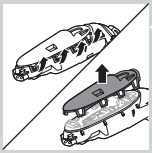

3 Break the snap hooks and remove the front panel of the power unit.

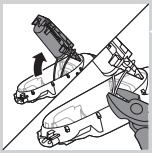

4 Take out the battery holder and cut the battery tags with a pair of cutting pliers.

Guarantee and support

If you need information or support, please visit **www.philips.com/support** or read the separate worldwide guarantee leaflet.

Guarantee restrictions

The shaving heads (cutters and guards) are not covered by the terms of the international guarantee because they are subject to wear.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, visit **www.philips.com/support** for a list of frequently asked questions or contact the Consumer Care Centre in your country.

Problem	Possible cause	Solution
The shaver does not shave as well as it used to.	The shaving heads are damaged or worn.	Replace the shaving heads (see chapter 'Replacement').
	Hairs or dirt obstruct the shaving heads.	Clean the shaving heads by following the steps of the extra-thorough cleaning method (see chapter 'Cleaning and maintenance').
		Clean the shaver thoroughly before you continue shaving (see chapter 'Cleaning and maintenance').
The shaver does not work when I press the on/off button.	The shaver is still attached to the mains. For safety reasons, the shaver can only be used cordlessly.	Disconnect the shaver from the mains and press the on/off button to switch on the shaver (see chapter 'The display', section 'Unplug for use reminder').
	The rechargeable battery is empty.	Recharge the battery (see chapter 'Charging').

Problem	Possible cause	Solution
	The travel lock is activated.	Press the on/off button for 3 seconds to deactivate the travel lock.
	The shaving unit is soiled or damaged to such an extent that the motor cannot run.	Clean the shaving heads or replace them (see chapters 'Cleaning and maintenance' and 'Replacement').
Water is leaking from the bottom of the shaver.	During cleaning, water may collect between the inner body and the outer shell of the shaver.	This is normal and not dangerous because all electronics are enclosed in a sealed power unit inside the shaver.
I replaced the shaving heads, but the replacement reminder symbol is still showing.	You have not reset the shaver.	Reset the shaver by pressing the on/off button for approx. 7 seconds (see chapter 'Replacement').
A shaving head symbol is suddenly showing on the display.	This symbol is a replacement reminder.	Replace the shaving heads (see chapter 'Replacement').

简介

感谢您的惠顾，欢迎光临飞利浦！
为了您能充分享受飞利浦提供的支持，请在 www.philips.com/welcome 上注册您的产品。
请阅读本用户手册，手册包含有关此剃须刀各种功能的信息以及一些使用技巧，让您的剃须体验更轻松更舒适。

基本说明（图 1）

1 卡入式修剪器附件
2 卡入式剃须刀头部件
3 手柄
4 小插头的转换插座
5 电池充电指示灯
6 “拔出插头即可使用”符号
7 旅行锁符号
8 更换提醒
9 清洗提示
10 适配器
11 小插头
12 精美软袋

注意事项

使用产品之前，请仔细阅读本重要信息，并妥善保管手册以供日后参考。

危险

- 保持适配器干燥。
- 警告符号注释：禁止用在打开的水龙头下进行清洗。

警告

- 电源适配器内含有一个变压器。切勿自行更换插头，否则将导致严重后果。
- 本产品不打算由肢体不健全、感觉或精神上有障碍或缺乏相关经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们使用本产品进行监督或指导。
- 请照看好儿童，本产品不能用于玩耍。
- 在自来水龙头下清洗剃须刀之前，务必拔掉其电源插头。

警告

- 切勿使用温度高于 80° C 的热水冲洗剃须刀。
- 如果本产品、适配器或任何其他部件损坏，请勿再使用，否则可能对人体造成伤害。务必用原装型号更换损坏的适配器、充电座或部件。
- 切勿使用压缩气体、钢丝绒、研磨性清洁剂或腐蚀性液体（例如汽油或丙酮）来清洁产品。

- 冲洗产品时，水可能从剃须刀底部的插口漏出。这是正常的，而且没有危险，因为所有的电子线路都密封在剃须刀内的一个密封壳内。

符合标准

- 此剃须刀可防水并符合国际认可的安全标准。它还可在沐浴或淋浴时使用，也可以在水龙头下清洁。出于安全考虑，剃须刀只能在不接电源的情况下使用。
- 符号注释：适合于在洗澡或淋浴时使用。允许在盛水的浴缸、淋浴、洗脸盆或其他器皿附近使用本器具。
- 本飞利浦产品符合所有有关暴露于电磁场的适用标准和法规。

概述

- 本适配器配有自动电压选择器，适合 100 至 240 伏范围内的电源电压。
- 电源适配器可将 100-240 伏的电压转换为 24 伏以下的安全低电压。

显示屏

充电

注意：本产品只能在不接电源的情况下使用。

- 充电约需 1小时。
- 快速充电：当剃须刀所含电量**不足**以完成一次剃须时，电池充电指示灯将快速闪烁。当电池充电指示灯开始缓慢闪烁时，剃须刀所含电量将足以完成一次剃须。
- 如果将产品接通电源，充电过程将继续。电池充电指示灯呈白色缓慢闪烁，表明产品正在充电。

电池已完全充满

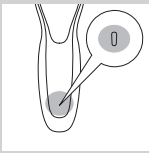

注意：本产品只能在不接电源的情况下使用。

注意：电池充满电后，显示屏会在 30 分钟后自动关闭。充电期间按开/关按钮，“拔出插头即可使用”符号会呈白色闪烁，提醒您需断开产品电源。

- 电池充满电后，电池充电指示灯将呈白色持续亮起。

电池电量不足

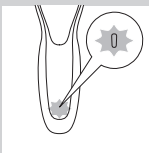

- 当电池的电量几乎耗尽时，电池充电指示灯会呈橙色闪烁。

清洗提示

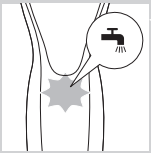

为获得更好剃须效果，我们建议您每次使用之后都要清洁剃须刀。

- 关闭剃须刀时，清洗提示符号闪烁，提醒您需要清洁剃须刀。

旅行锁

您可以在携带剃须刀旅行之前将其锁住。旅行锁可防止剃须刀被意外打开。

启用旅行锁

1 按住开/关按钮 3 秒钟以进入旅行锁模式。

◗ 激活旅行锁时，旅行锁符号会呈白色持续亮起。激活旅行锁后，旅行锁符号会闪烁。

解除旅行锁

1 按开/关按钮 3 秒钟。

◗ 旅行锁符号闪烁，然后持续亮起。
现在可以重新开始使用剃须刀。

更换剃须刀头

为获得更好剃须效果，建议每两年更换一次剃须刀头。

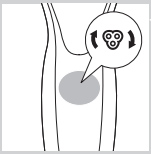

- 本产品配有更换提醒，它会提醒您更换剃须刀头。更换提醒指示灯会呈白色持续亮起。

注意：更换剃须刀头后，您需要通过按开/关按钮 7 秒来重置剃须刀。

“拔出插头即可使用”提醒

- 产品配有“拔出插头即可使用”提醒。“拔出插头即可使用”符号呈白色闪烁，提醒您需断开产品电源。

充电

充电约需 1小时。
剃须刀充满电后的剃须时间可长达 50 分钟。

注意：本产品只能在不接电源的情况下使用。
第一次使用剃须刀之前，或当显示屏指示电池电量快要耗尽时，请先为剃须刀充电。

使用适配器充电

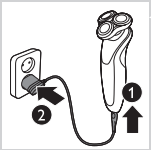

1 确保产品已关闭。

2 将小插头插入本产品 (1)，然后将适配器插入电源插座 (2)。

使用剃须刀

剃须

皮肤适应期
前几次剃须可能不会带给您预期效果，并且您的皮肤可能会受到轻度刺激。这是正常的。您的皮肤和胡须需要时间适应新的剃须系统。建议您在 3 周时间内定期剃须（至少每周 3 次），以便让您的皮肤适应新的剃须刀。

注意： 本产品只能在不接电源的情况下使用。

1 按一下开/关按钮以启动剃须刀。
◗ 显示屏将亮起几秒钟的时间。

2 将剃须刀头在您的皮肤上作迂回运动。

注意： 请勿作直线运动。

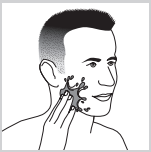

3 按一下开/关按钮关闭剃须刀电源。
◗ 显示屏将亮起几秒钟时间，以显示电池剩余电量。

湿剃
您也可以先用剃须泡沫或剃须啫喱将脸弄湿，然后再用此剃须刀进行剃须。
要用剃须泡沫或剃须啫喱剃须，请按照下面的步骤执行操作：

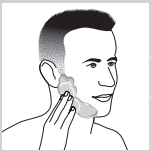

1 用水润湿一下皮肤。

2 在皮肤上涂上剃须泡沫或剃须啫喱。

3 在水龙头上冲洗一下剃须刀头部件，确保剃须刀头部件可以在您的皮肤上顺畅滑动。

4 按一下开/关按钮以启动剃须刀。

5 将剃须刀头在您的皮肤上作迂回运动。

注意： 在水龙头下定期冲洗剃须刀，确保其能够继续在您的皮肤上顺畅滑动。

6 使用后，擦干您的脸并彻底清洁剃须刀（见“清洁和保养”一章）。

注意： 确保冲洗干净剃须刀上的泡沫或剃须啫喱。

使用修剪器附件

您可使用修剪器附件修剪鬓角和须髭。

1 确保产品电源已关闭。

2 将剃须刀头部件竖直抽离产品。

注意： 将剃须刀头部件从产品上拉下时，不要旋转。

3 将修剪器附件的凸缘插入剃须刀顶部的槽内。然后按下修剪器附件以将其安装在剃须刀上（可听到“咔哒”一声）。

4 按一下开/关按钮打开产品。
◗ 显示屏将亮起几秒钟的时间。

5 现在可以开始修剪了。

6 按一下开/关按钮关闭本产品。
◗ 显示屏将亮起几秒钟时间，以显示电池剩余电量。

7 将修剪器附件竖直抽离产品。

注意：将修剪器附件从产品上拉下时，不要旋转。

8 将剃须刀头部件的凸缘插入产品顶部的槽内。然后按下剃须刀头部件以将其安装在产品上（可听到“咔哒”一声）。

清洁和保养

在水龙头下冲洗剃须刀

每次剃须后清洁剃须刀，以获得更好的剃须性能。

使用热水时一定要小心。切记先检查水温是否太高，以防烫手。

不要用毛巾或纸巾擦拭剃须刀头部件，因为这样可能会损坏剃须刀头。

1 关闭剃须刀。

2 在热水龙头下冲洗剃须刀头部件片刻。

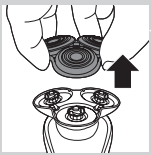

3 将剃须刀头支架从剃须刀头部件的底部抽离。

4 将剃须刀头支架在热水龙头下冲洗 30 秒。

5 小心甩干多余的水，然后使剃须刀头支架干燥。

6 将剃须刀头支架重新装回剃须刀头部件的底部（可听到“咔哒”一声）。

彻底清洁方法

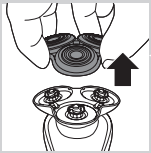

确保产品电源已关闭。

1 将剃须刀头支架从剃须刀头部件的底部抽离。

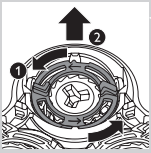

2 逆时针 (1) 旋转固定环，并将其取下 (2)。

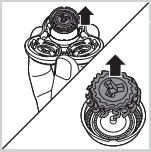

3 从剃须刀头支架上卸下剃须刀头。每个剃须刀头都包括刀片和网罩。

注意： 不要同时清洁多组刀片和网罩，因为它们都是相互匹配的。如果不小心将刀片装到了错误的网罩上，则需要数周时间才能恢复产品的最佳剃须性能。

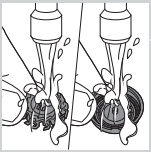

4 在水龙头下清洁刀片和网罩。

5 清洁后，将刀片放回网罩中。

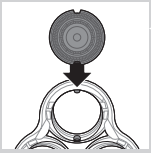

6 将剃须刀头装回到剃须刀头支架中。

注意： 确保剃须刀头两侧的槽口正好卡入剃须刀头支架上的凸起部位。

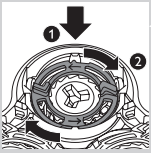

7 将固定环放回剃须刀头支架 (1) 并将其顺时针旋转 (2)。

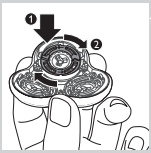

注意： 当您重新插入剃须刀头并重新安装固定环时，请将剃须刀头支架握在手中。当您执行此操作时，切勿将剃须刀头支架放在平面上，否则可能会造成损坏。

8 将剃须刀头支架重新装回剃须刀头部件的底部。

清洁修剪器附件

每次使用后都要清洁修剪器附件。

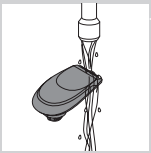

1 打开装有修剪器附件的产品。

2 在热水龙头下冲洗修剪器附件片刻。

3 清洁完成后，关闭产品。

提示： 为获得更好修剪性能，每六个月用一滴缝纫机油润滑修发器齿。

4 小心地甩干多余的水，然后使修剪器附件干燥。

存储

1 将剃须刀存放在随附的软袋中。

注意： 我们建议您先使剃须刀干燥，然后再将其存放在软袋中。

更换

更换剃须刀头

为获得更好剃须效果，建议每两年更换一次剃须刀头。

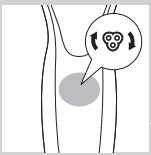

更换提醒
剃须刀头部件符号会亮起，指示需要更换剃须刀头。应立即更换损坏的剃须刀头。
只能用原装 SH70 飞利浦剃须刀头进行更换。

1 关闭剃须刀后，剃毛刀头部件符号会持续亮起。

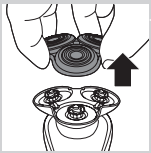

2 将剃须刀头支架从剃须刀头部件的底部抽离。

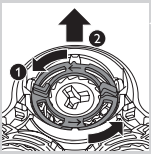

3 逆时针 (1) 旋转固定环，并将其取下 (2)。

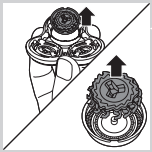

4 将剃须刀头从剃须刀头支架上卸下并丢弃。

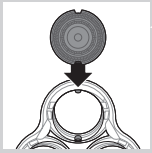

5 将新的剃须刀头放在支架中。

注意： 确保剃须刀头两侧的槽口正好卡入剃须刀头支架上的凸起部位。

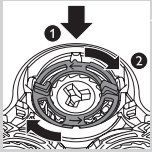

6 将固定环放回剃须刀头 (1) 并将其顺时针旋转 (2)。

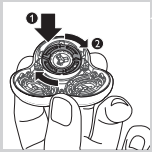

注意： 当您重新插入剃须刀头并重新安装固定环时，请将剃须刀头支架握在手中。当您执行此操作时，切勿将剃须刀头支架放在平面上，否则可能会造成损坏。

7 将剃须刀头支架重新安装到剃须刀头部件的底部。

8 要重置剃须刀，请按住开/关按钮约 7 秒钟。

订购附件

要购买附件和备件，请访问www.shop.philips.com/service 或联系飞利浦经销商。您也可以联系您所在国家/地区的飞利浦客户服务中心（联系详情，请参阅全球保修卡）。
可选配以下附件:

- HQ8505 适配器
- SH70 飞利浦剃须刀头
- HQ110 飞利浦剃须刀头清洁喷雾剂

剃须刀头

- 建议您每两年更换一次剃须刀头。务必使用原装 SH70 飞利浦剃须刀头进行更换。

回收

弃置产品时，请不要将其与一般生活垃圾扔在一起，应将其交给指定的回收中心，这样做有利于环保。

卸下剃须刀的充电电池

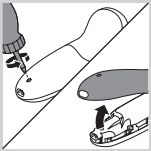

只有在丢弃剃须刀时才可取下充电电池。
请确保在取下电池时电量已完全耗尽。

注意，电池带非常锋利。

1 用螺丝刀卸下背板中的螺钉。然后卸下背板。

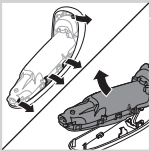

2 将钩子向外掰，取出电源部件。

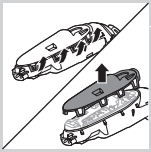

3 脱开安全钩，取下电源部件的前面板。

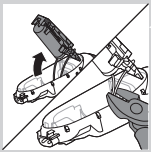

4 取出电池舱，用一把钢丝钳剪下电池标签。

保修和支持

如果您需要信息或支持，请访问 www.philips.com/support 或阅读单独的全球保修卡。

保修条款

由于剃须刀头（刀片和网罩）属于易磨损物品，因此不在国际保修条款的涵盖范围之列。

故障种类和处理方法

本章归纳了使用本产品时最常见的一些问题。如果您无法根据以下信息解决问题，请访问 www.philips.com/support 查阅常见问题列表，或联系您所在国家/地区的客户服务中心。

问题	可能的原因	解决方法
剃须刀的剃须效果没有以前好。	剃须刀头已损坏或磨损。	更换剃须刀头（见“更换”一章）。
	毛发或污垢堵塞了剃须刀头。	通过执行下列彻底清洁方法中的步骤来清洁剃须刀头（见“清洁和保养”一章）。
		在继续剃须前彻底清洁剃须刀（见“清洁和保养”一章）。
按下开/关钮时，剃须刀不工作。	剃须刀仍连接到电源。出于安全考虑，剃须刀只能在不接电源的情况下使用。	断开剃须刀的电源，按开/关按钮打开剃须刀（请参阅“显示屏”一章中的“拔出插头即可使用提醒”部分）。
	充电电池的电量已耗尽。	给电池充电（见“充电”一章）。
	旅行锁已被激活。	按住开/关按钮 3 秒钟以禁用旅行锁。
	剃须刀头部件被污染或损坏，导致马达无法运行。	清洁剃须刀头或进行更换（见“清洁和保养”及“更换”章节）。
水从剃须刀底部漏出。	在清洁过程中，水可能聚集在剃须刀的机身内部与外壳之间。	这是正常的，没有危险，因为所有电子元件都封闭在剃须刀内部的密封电源部件中。

问题	可能的原因	解决方法
我更换了剃须刀头，但仍然显示更换提醒符号。	您尚未重置剃须刀。	按住开/关按钮大约 7 秒钟以重置剃须刀（见“更换”一章）。
显示屏上突然显示剃须刀头符号。	此符号是更换提醒。	更换剃须刀头（见“更换”一章）。

PHILIPS

产品 ：飞利浦电动剃须刀
型号 ：S7370
额定电压 ：220V～
额定频率 ：50Hz
额定输入功率：9 W
产地 ：荷兰
生产日期 ：请见产品本体

制造商：飞利浦电子香港有限公司
香港新界沙田香港科学园科技道东五号

经销单位：飞利浦（中国）投资有限公司
上海市天目西路218号1602-1605
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.9-2008制造

PHILIPS

产品 ：飞利浦电动剃须刀
型号 ：S7310
额定电压 ：220V～
额定频率 ：50Hz
额定输入功率：9 W
产地 ：荷兰
生产日期 ：请见产品本体

制造商：飞利浦电子香港有限公司
香港新界沙田香港科学园科技道东五号

经销单位：飞利浦（中国）投资有限公司
上海市天目西路218号1602-1605
全国顾客服务热线: 4008 800 008

本产品根据国标 GB4706.1-2005, GB4706.9-2008制造

保留备用
发行日期：30/10/2014

100% recycled paper
100% 循环再造纸

www.philips.com

4222.002.5712.1